

FRONTLINE[®]
international




FRYQ[™]
oil management system

FryQ Connect App Instructions



Version 2026

Table of Contents

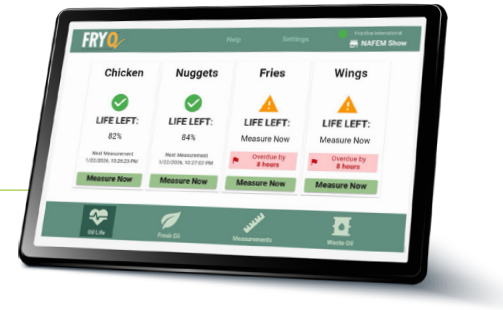


FryQ Connect App Instructions

- A. Installation & Setup 3
- B. Store Setup 6
- C. Bluetooth Oil Tester Connection 7
- D. Oil Tester Setup 9
- E. Measuring Oil Quality 10
- F. Fresh Oil System 12
- G. Waste Oil System Connection 12
- H. Oil Quality History 13
- I. Adding Users & Changing Passcodes 13
- J. Troubleshooting 14



Installation

A. INSTALLATION & SETUP


1. Ensure your tablet has a **Chrome-based browser** installed and accessible by the current user.
2. Navigate to <https://fryq.frontlinem3.com>

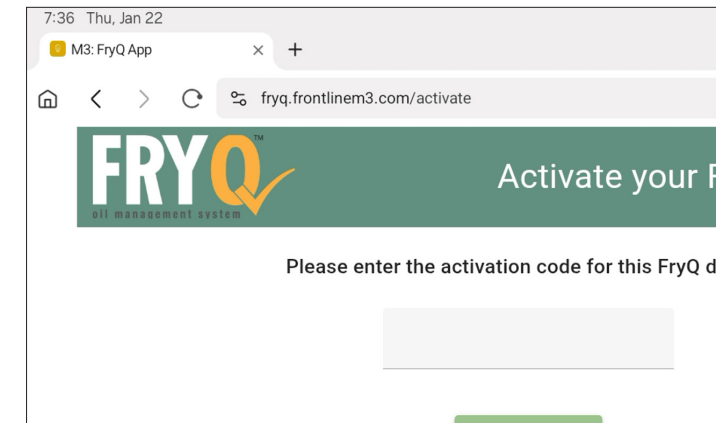


3. Enter the **6-digit activation code** for your FryQ Connect system. This may be your store number with zeroes added to the beginning. For example, if your store number is 123, your code would be 000123. You also may have received a separate code via email. After entering your code, tap **“Activate Now.”**

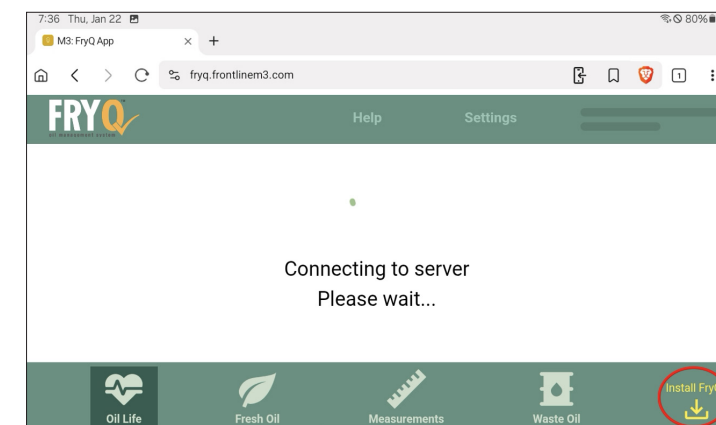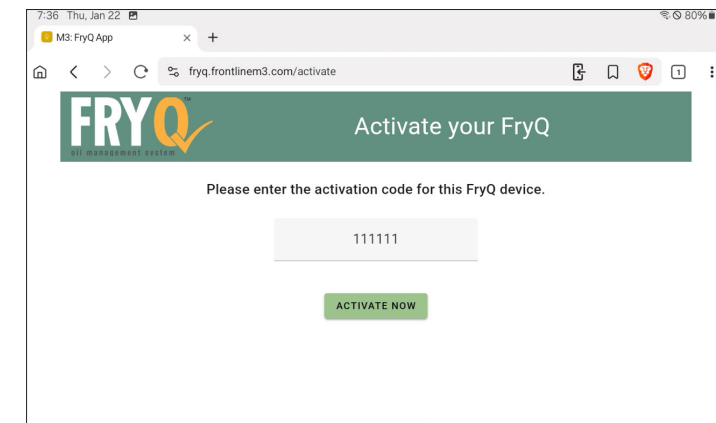


4. Tap “Install FryQ” on the bottom right. Your browser will ask if you want to install the application; tap Install.

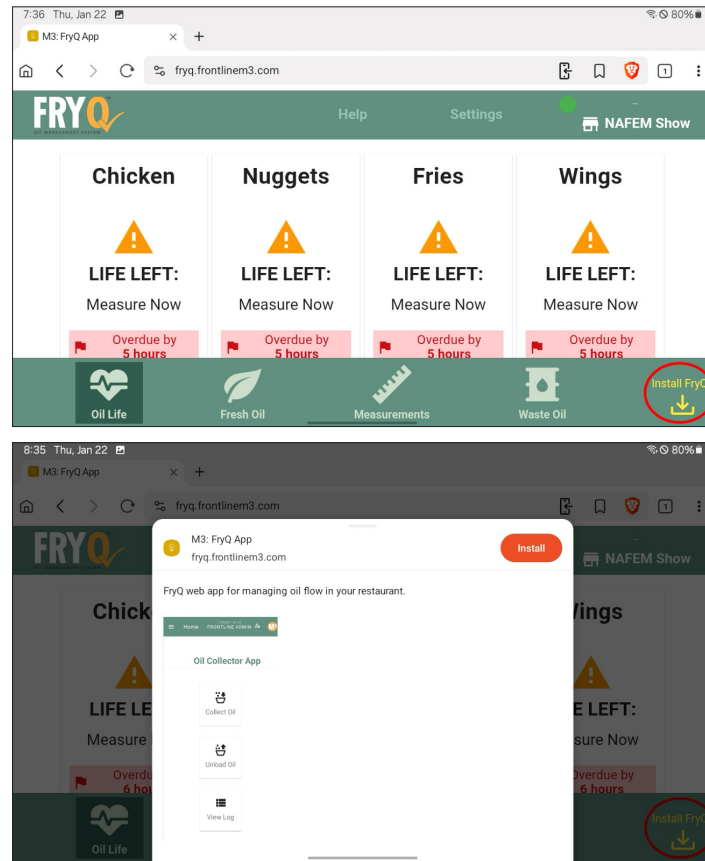


5. The app will ask if you would like to add a shortcut to FryQ to your home screen. **This is advised.** Tap Add to do so

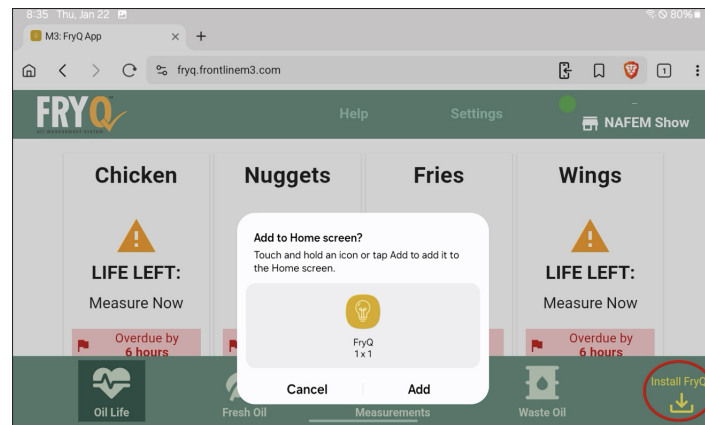

6. Before you close your browser, enable Bluetooth for the FryQ app. In your browser’s address bar, navigate to the URL **chrome://flags**.

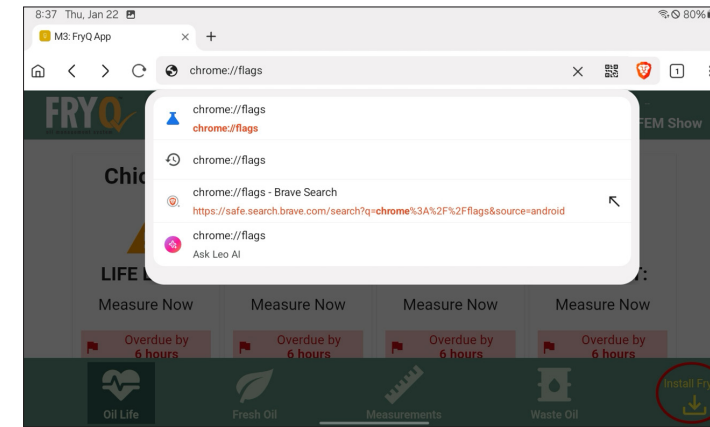

7. Type “Bluetooth” into the search bar, and change all settings to “Enabled.”


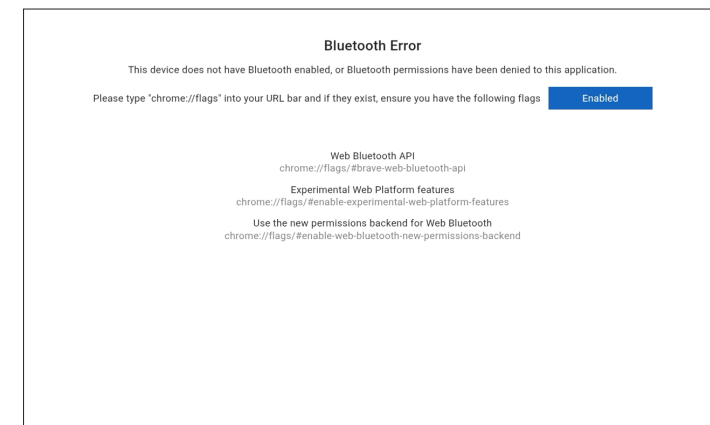


8. Close your browser. Go to your home screen (or applications list) and tap the FryQ icon to open the app.


Store Setup

B. STORE SETUP

1. If your device has not been pre-configured through the M3 portal, you may need to perform the initial setup to add your vats to the FryQ app. (Note: If your FryQ has been pre-configured, you will not see this screen, but you can always access it through **Settings > Controller > Perform Initial Setup**). Here, you will select your number of vats (1-4), give each one a name (if desired), and a description of each vat (if desired). **Tap Next** until you get to the **“Activation Successful”** screen.

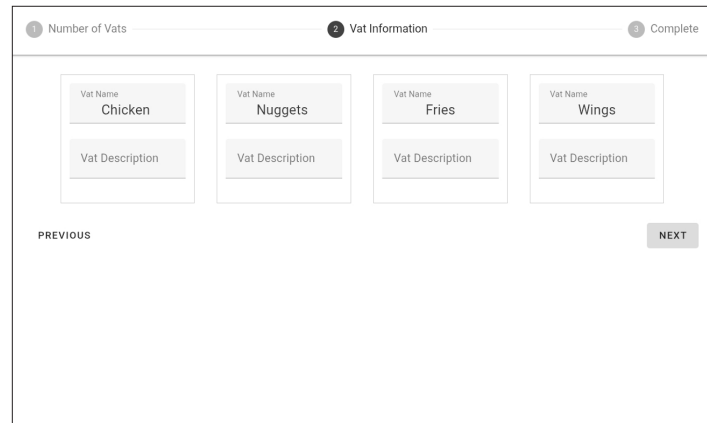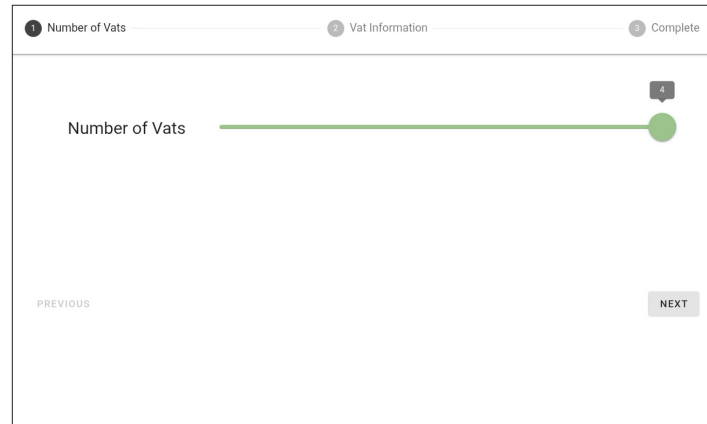


2. Tap **“Get Started”** to begin using your FryQ Connect.

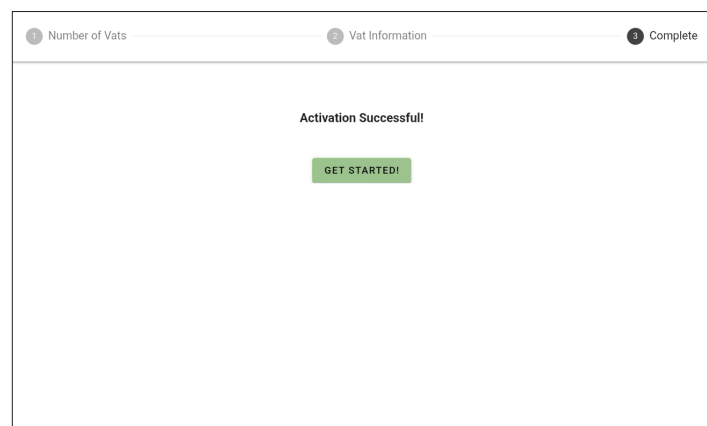


Bluetooth

C. BLUETOOTH OIL TESTER CONNECTION


1. If you see a screen like this at any point, you need to **go back to Initial Setup and enable Bluetooth** on the web browser.

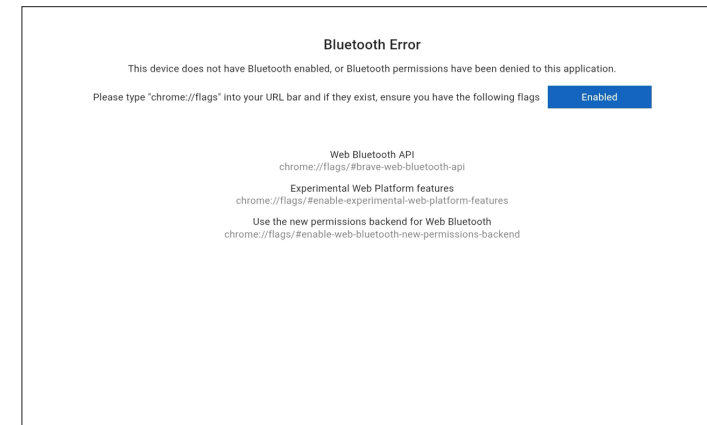


2. On the main FryQ app screen, **tap Settings in the top bar**.

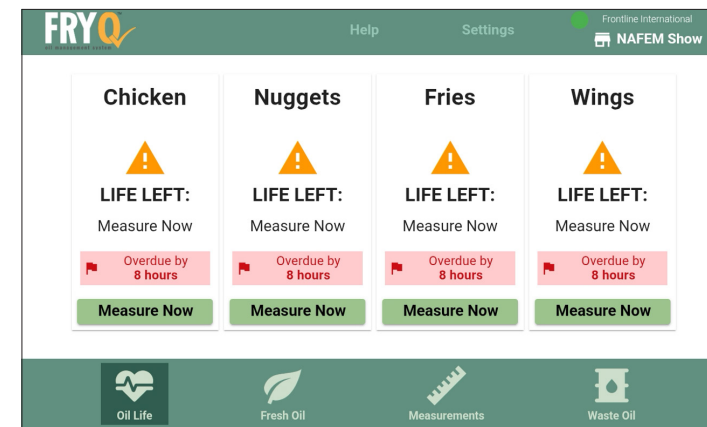


3. The default access code is **0000** (you should change this later). After you enter the code, you will get to the main settings page.

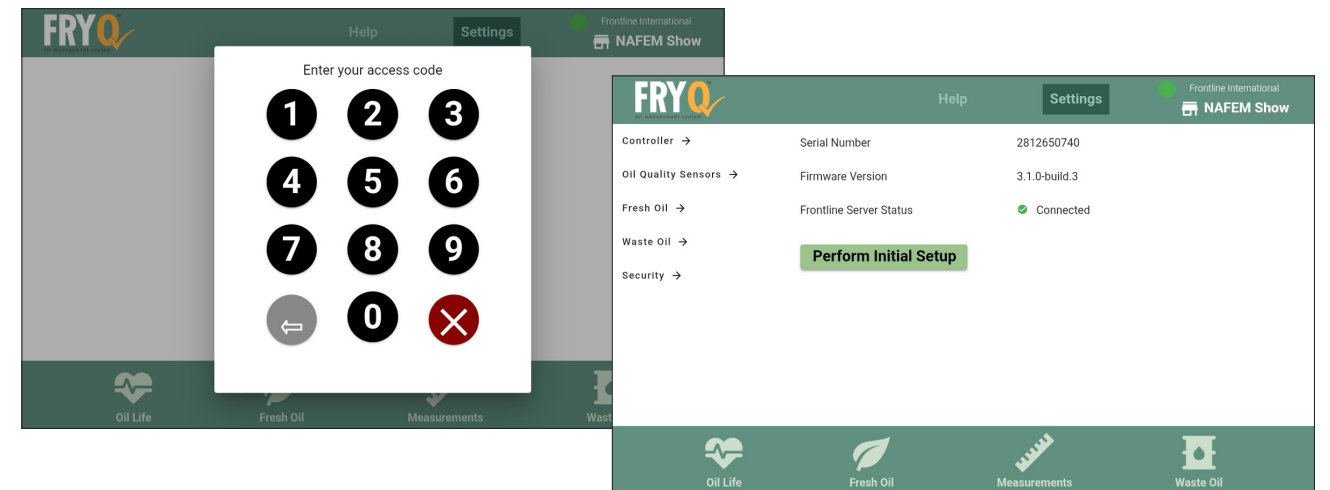


4. Tap **“Oil Quality Sensors”** on the left tool bar and then tap **Add New Sensor**. If you get a permissions dialog for pairing a Bluetooth device, you will need to allow this permission request.

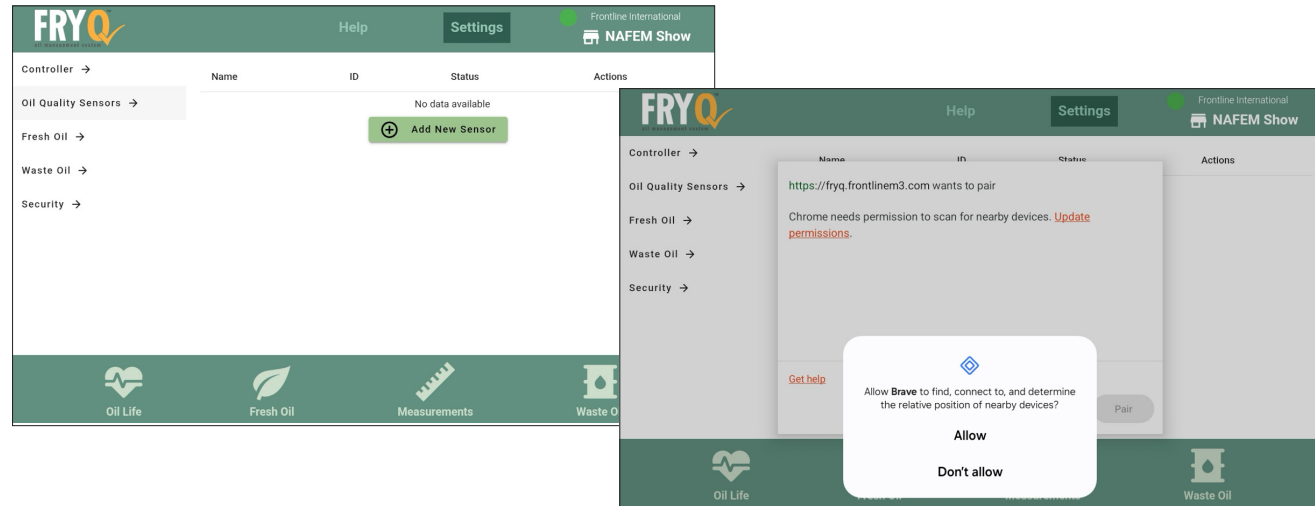

5. Once permissions are granted, **press the power button on your Oil Tester** and you will see a device show up called **“Oil-Tester.”** Tap the device and then tap **“Pair.”** After a few seconds, you should see your device listed on the **Settings** page.

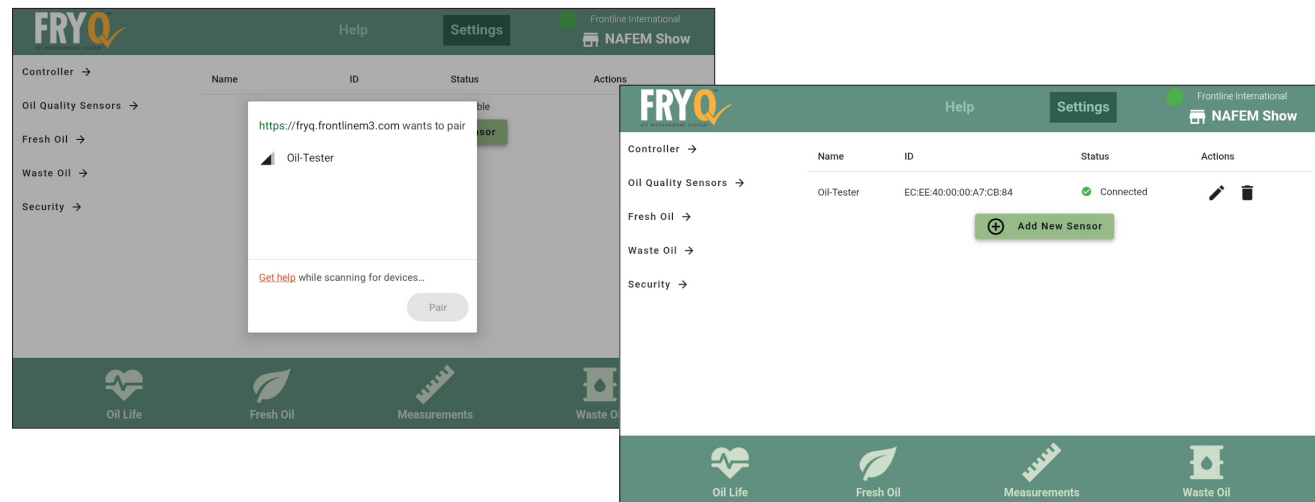


6. Now, tap **Oil Life** on the bottom bar to go back to the main FryQ page. If your sensor is still powered on, you should see the **“Measure Now”** buttons enabled for each vat.

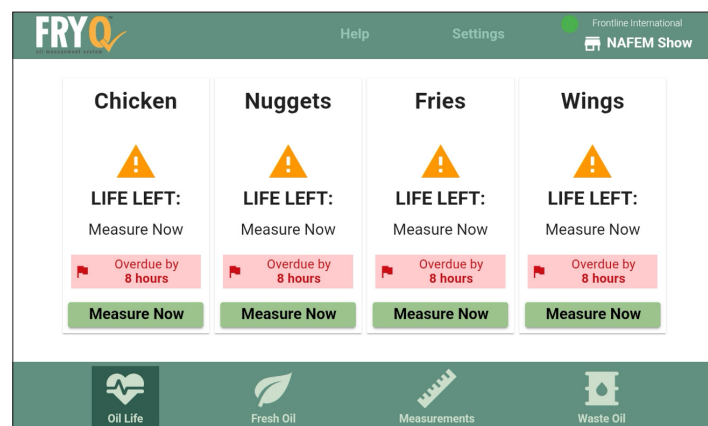


D. OIL TESTER SETUP

There are a few settings you will need to configure on your oil tester.

1. Enable auto hold: Press and hold the **“Hold”** button to enter the device menu. With the **“Auto”** option selected, press OK. Scroll with the Up/Down button, select **“On,”** and press **OK**.

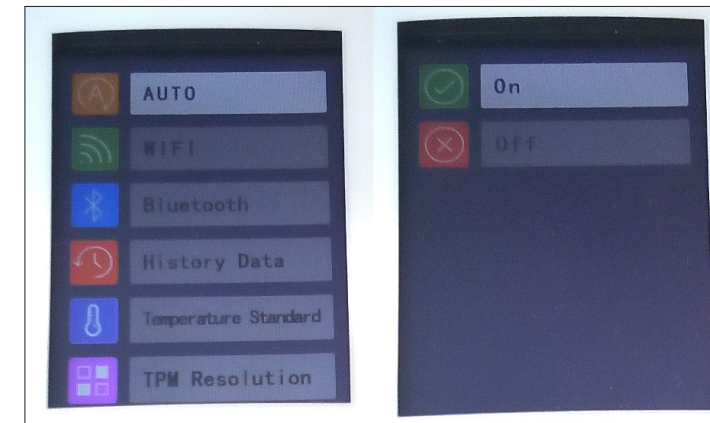

2. **Disable WiFi:** Press the **Down** button to select WiFi. Press OK. Press Down to select **“Off”** and press **OK**. (This will save battery power, since WiFi is not used.)

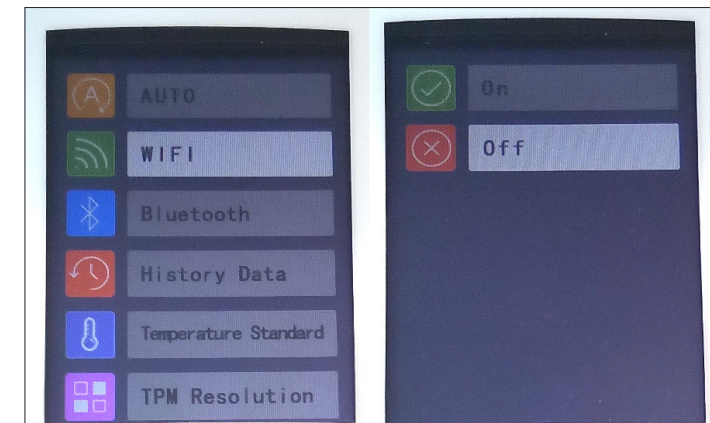


Oil Quality


E. MEASURING OIL QUALITY

There are two ways to begin an Oil Quality measurement, selecting the vat either from the FryQ Connect app or from the Oil Tester sensor itself. Each measurement must be attached to a vat for it to be recorded.

1. To use the FryQ app select the vat to measure, tap “Measure Now” on a vat on the FryQ app. That vat will show a circular loading image while the measurement is taking place. Next, insert the Oil Tester sensor into the oil (be sure to insert the sensor so the oil level is **between the Min and Max lines on the sensor shaft**), and wait for the word HOLD to appear on the screen

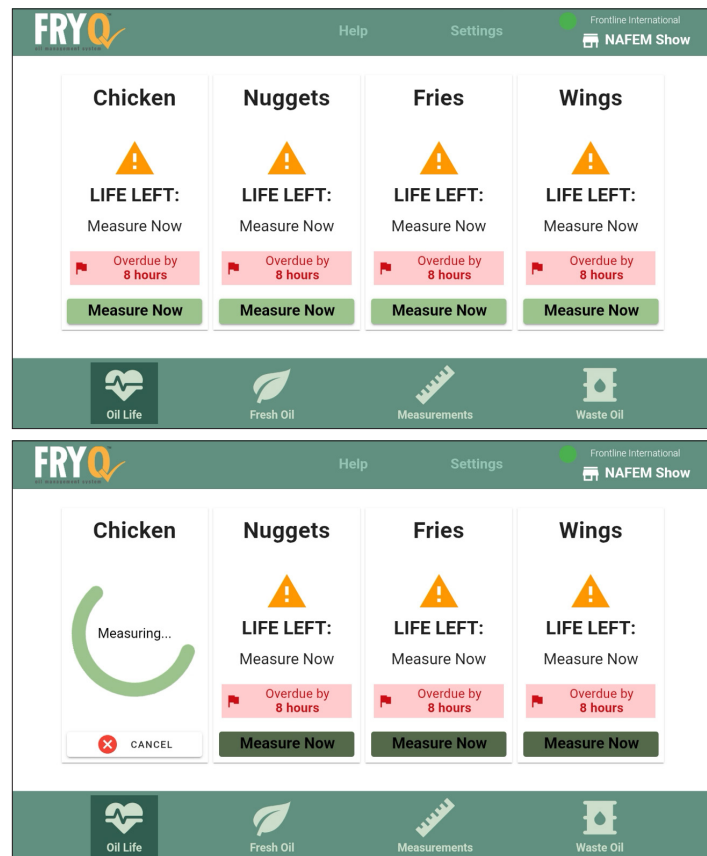

2. When the measurement is done (**Important: you must have Auto = On in sensor settings**), the FryQ will automatically record the reading and update the vat oil health.

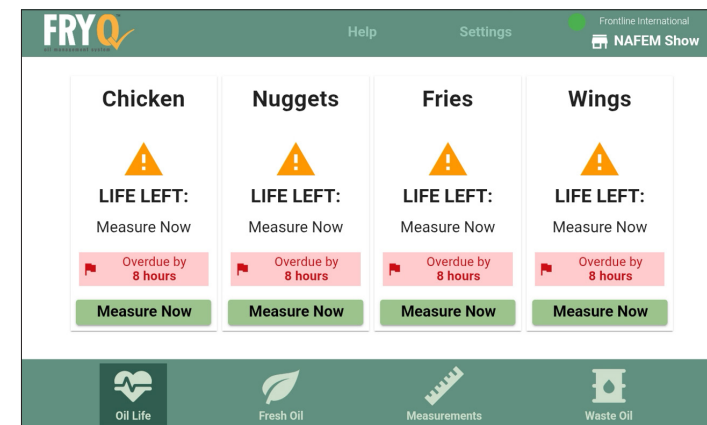


3. To start a measurement using the Oil Tester itself, **select the vat number on the Oil Tester** sensor by pressing the **Up/Down arrows** (the vat number is shown on the bottom left of the screen) and insert the sensor into the oil. **Be sure the oil level is between the Min and Max lines** on the sensor shaft. Wait until the sensor screen says **HOLD**. The measurement should show up on the FryQ app within a few seconds.

Fresh Oil

F. FRESH OIL SYSTEM CONNECTION


The FryQ tablet allows you to view your store's Frontline Fresh or Recovery Oil system's status, and to dispense oil automatically (if properly equipped).

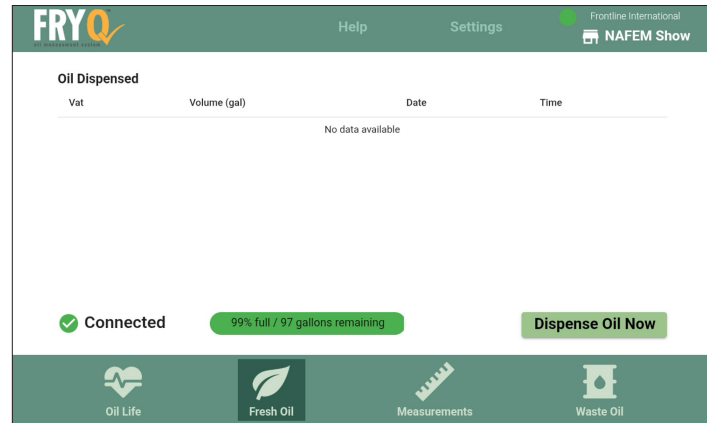

Oil Quality

H. OIL QUALITY HISTORY


FryQ Connect allows you to see your oil quality history on the Measurements page. You can see all of the measurements taken by this system over the past 30 days. More data is available on the Frontline M3 Portal.

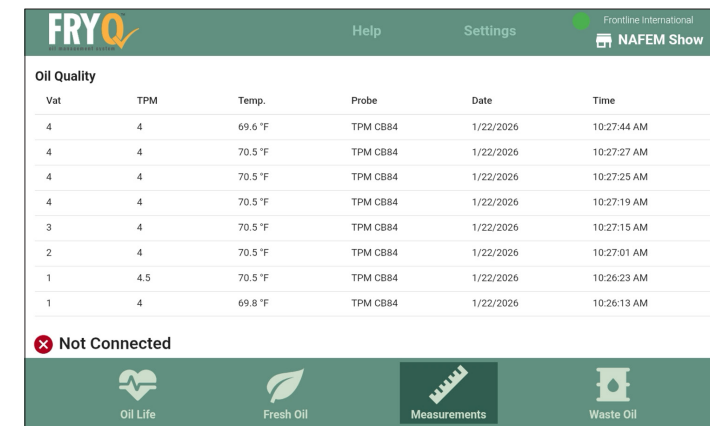

Waste Oil

G. WASTE OIL SYSTEM CONNECTION


The FryQ tablet allows you to view the status of your store's Frontline Waste Oil system, dispose oil automatically into the tank (if properly equipped), and open or close the collect valve.

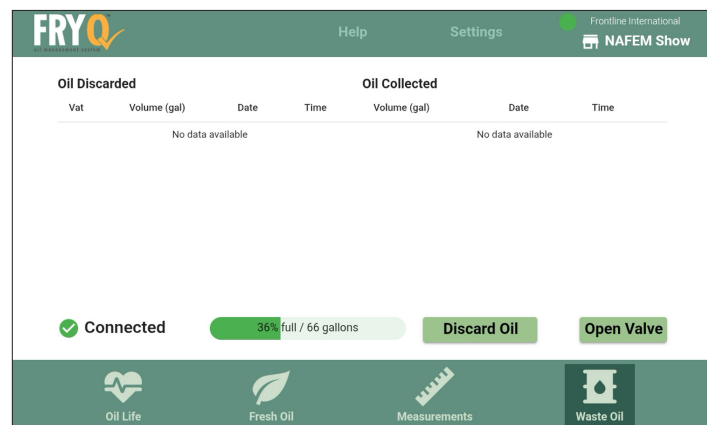

Users & Passcodes

I. ADDING USERS & CHANGING PASSCODES


To change the default passcode from 0000 or to add other users, enter Settings and tap the Security tab. You can now edit or add users as required. This is a useful feature to enable multiple managers or other authorized users to view and modify settings.

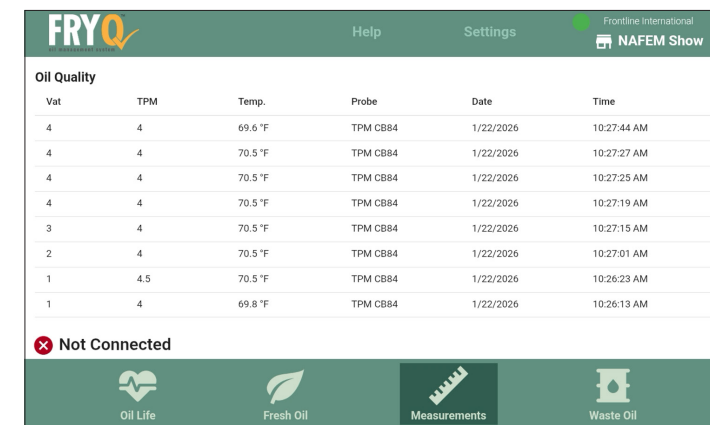

J. TROUBLESHOOTING

The FryQ Connect app has a useful screen called the Installation Checklist to help diagnose common problems and to see system status.

Tap the Help button in the top bar and tap Installation Checklist on the left. If any of the items have a problem, it will be shown on this screen. You can either use the M3 Portal to configure your store or contact Frontline technical support.

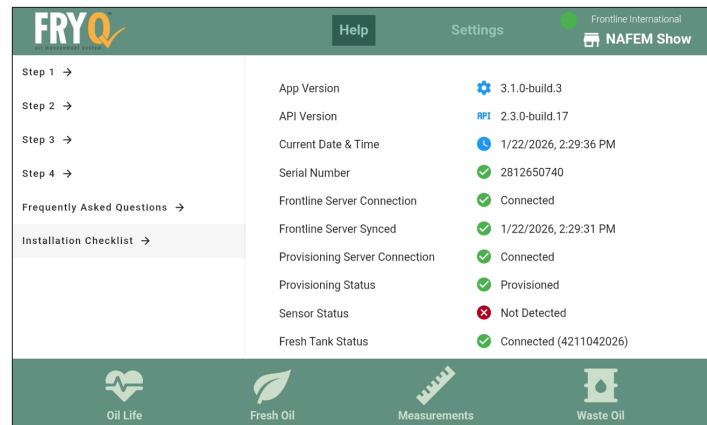

FRONTLINE[®]
i n t e r n a t i o n a l

Frontline International Inc. • 187 Ascot Parkway, Cuyahoga Falls, OH 44223
Phone: 330-861-1100 • Fax: 330-861-1105 • www.frontlineii.com