


Operating Instructions



STEP 1

Turn on the controller by pressing the **power button**.

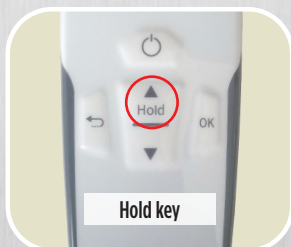

STEP 2

Press and hold the **Hold key** to enter the **setting menu interface** under the measurement interface. You can adjust the position of the selected cursor through the up arrow and down arrow. Press the **OK key** to enter the next level menu.



STEP 3

Place the wand in the corresponding vat selected in step 2. Ensure the rectangular frame holding the sensor is **fully submerged and just below the oil level**.



BURN HAZARD PRESENT: Be mindful of where the wand is held and the surroundings to avoid injury.



STEP 4

Press the **OK button** to initiate the oil quality measurement. Continue to hold the controller in the oil for **30 seconds** to complete the measurement which is indicated by a **check mark displayed in the bottom right corner**.

To measure another vat: Repeat steps 2-4.

Power down the unit: Hold the power button for 3 seconds.

NOTE: Sensor is programmed to power down after 10 seconds of inactivity to conserve battery life.